

SKU:TXNG04V091

(TX091)

OWNER'S MANUAL

4V CORDLESS NAIL GUN



Thank you for buying this **Cordless Nail Gun!**Please read this manual carefully before using the product.



DESCRIPTION OF SYMBOLS

v	Volts	Hz	Hertz	
~	Alternating current	А	Amperes	
/min	Fasteners per minute	===	Direct Current	
凸	Indoor Use Only		Double Insulated	
Ø	Regulator Compliance Mark (RCM)	Efficiency Level (MEPS)	Transformer Energy Rating (MEPS)	
	Wear eye protection	\triangle	Warning	
Read Instruction Manual				









GENERAL POWER TOOL SAFETY WARNINGS

▲ WARNING

Read all safety warnings and all instructions.
Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. WORK AREA SAFETY

- a. Keep the work area clean and well lit. Cluttered or dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2. ELECTRICAL SAFETY

- a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock
- d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e. When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use, reduces the risk of electric shock.
- f. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.



3. PERSONAL SAFETY

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards
- 4. POWER TOOL USE AND CARE
- a. Do not force the power tool. Use the correct power tool for your application. The proper power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

- d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges
- g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- 5. Battery tool use and care
- a. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b. Use power tools only with specifically designated
 battery packs. Use of any other battery packs may create a risk of injury and fire.
- c. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- d. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes,additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- 6. Service
- a. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.



CORDLESS NAIL GUN SAFETY WARNINGS




The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.


Young children should be supervised to ensure that they do not play with the appliance.

- Always assume that the tool contains fasteners. Careless handling of the stapler can result in unexpected firing of fasteners and personal injury.
- Do not point the tool towards yourself or anyone nearby. Unexpected triggering will discharge the fastener causing an injury.
- Do not actuate the tool unless the tool is placed firmly against the workpiece. If the tool is not in contact with the workpiece, the fastener may be deflected away from your target.
- Disconnect the tool from the power source when the fastener jams in the tool. While removing a jammed fastener, the tacker may be accidentally activated if it is plugged in.
- Do not use this stapler for fastening electrical cables.
 It is not designed for electric cable installation and may damage the insulation of electric cables thereby causing electric shock or fire hazards.
- Always use both hands to operate the tool. Your secondary hand should be used to press the back of the tool firmly down onto the surface to be fastened.
- Do not place the workpiece on any part of the body. The workpiece may split causing the fastener to ricochet.
- Do not use fasteners near edge of material. Be aware that the fastener may follow the grain of the wood, causing it to protrude unexpectedly from the side of the work material or deflect.

CORDLESS NAIL GUN

- 1. Magazine Window
- 2. Trigger
- 3. Sure Grip Handle
- Magazine Latch
 Charging Socket
- 6. Fastener Selector
- 7. Safety Striker Guard
- 8. On/Off Switch
- 9. LED Charge Indicator

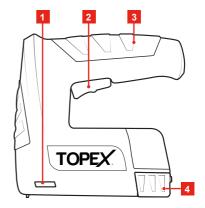

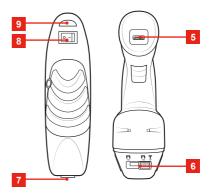

SPECIFICATIONS

Input	4V	
Battery	1.5Ah Li-lon	
Charging Time:	3 hours	
Firing Rate:	30/min	
Staple Size:	6&8mm T53	
Nail Size:	10mm T47	
Weight:	0.9kg	



SETUP & PREPARATION


1. BATTERY

⚠ WARNING

THE POWER SUPPLY FOR THIS CHARGER SHOULD BE PROTECTED BY A RESIDUAL CURRENT DEVICE (RATED AT 30MA OR LESS); THIS REDUCES THE RISK OF ELECTRIC SHOCK.

Charging


The charge indicator will illuminate red if the battery is low, indicating that the battery needs charging.

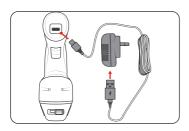

- 1. Plug the USB Type C cable into the charging socket and charge adaptor.
- 2. Plug the charging adaptor into a power point and switch it on.

Note: The charging indicator will remain red whilst charging.

3. Once fully charged, the indicator light will illuminate green.

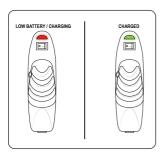


2. FASTENER SELECTION

Staples

Accessories to suit this staple gun can be purchased from Bunnings Warehouse.

This tool accepts staples with the measurements below:

4-8MM **T53** STAPLES

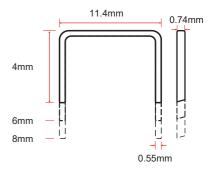

Nails

This tool accepts nails with the measurements below:

10MM **T47 BRAD** NAILS






3. LOADING THE MAGAZINE

ENSURE THE TOOL IS SWITCHED OFF BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.


Loading Fasteners

This tool only accepts T50 or JT21 staples or C1 Brad nails with the dimensions specified in this manual. Other types of staples, including paper staples, will jam the unit. For best results, load a full row of staples before use.


1. Squeeze the magazine latch and pull the slider out of the tool.

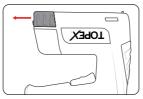


Insert a row of staples or nails into the magazine.

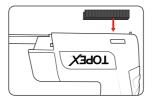

Note: For nails, be sure to align them to the side with the embossed nail icon so that the nail head is against the internal groove.

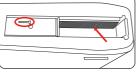

 Push the magazine slider back into the unit until it clips into place.

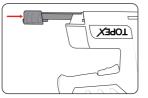

OPERATION

4. CONTROLS


Adjusting The Firing Mode

The mode selector needs to be adjusted to suit the different staple thicknesses.

⚠ WARNING

FAILURE TO SET THE CORRECT MODE WILL CAUSE THE TOOL TO JAM OR MISFIRE MULTIPLE FASTENERS AT A TIME.

Move the slider to the right for T50 staples or T47 brad nails. Move the slide to the left for T53 staples.

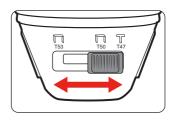


Firing A Staple or Nail

⚠ WARNING


ALWAYS USE BOTH HANDS WHEN USING THE TOOL.

The Safety Striker System is a two step process where a staple will only fire when the safety striker guard is pushed against the material to be fastened.

 With one hand, push down on the back of the tool to press the safety striker guard down onto the work surface.

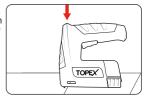

2. To fire the staple nail gun, squeeze the trigger with your other hand.

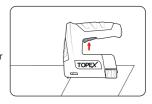



5. TROUBLESHOOTING

ENSURE THE TOOL IS SWITCHED OFF BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.

Jammed Staple

 Squeeze the magazine latch and pull the magazine slider out of the tool



- 2. Using a pair of pliers, remove any jammed staples/nails.
- With the magazine still open, tap the safety striker guard against a surface to dislodge any loose fasteners.

Short Battery Runtime

Ensure the battery is properly charged. It will take 4-5 charging cycles before the battery reaches optimum charge and run time.

MAINTENANCE

6. APPLIANCE CARE

↑ WARNING

BEFORE CLEANING THE APPLIANCE OR CARRYING OUT ANY MAINTENANCE PROCEDURE, MAKE SURE THAT IT IS SWITCHED OFF AND DISCONNECTED FROM THE POWER SUPPLY TO PREVENT ACCIDENTAL STARTING.

When not in use, the tool should be stored in a dry, frost free location, keep out of children's reach.

If the housing of the tool requires cleaning, do not use solvents. Use of a cloth only is recommended. Never immerse any part of the tool into liquid.

Note: TOPEX will not be responsible for any damage or injuries caused by the repair of the tool by an unauthorised person or by mishandling of the tool.

CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

WARRANTY

Your warranty form should be retained by you at all times. In order to make a claim under this warranty, you must return the product with your receipt of purchase. Prior to returning your product for warranty. Please contact us via our after sales support services.

EMAIL: support@topto.com.au

1 YEAR REPLACEMENT WARRANTY

Your product is guaranteed for a period of 12 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective, it will be replaced in accordance with the terms of this warranty. Warranty excludes consumable parts, for example: driver hits

WARNING

1. The following actions will result in the warranty being void.

Professional, Industrial or high frequency use.

- 2. If the tool has been operated on a supply voltage other than that specified on the tool.
- 3. If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- 4. Failure to perform maintenance as set out within the instruction manual.
- 5. If the tool is disassembled or tampered with in any way.

How to get 1 extended year warranty?

This product comes with 1 year replacement warranty. However, you may get 1 extra year warranty with conditions. Please ask for detail by sending an email to support@topto.com.au

TOPEX.





Contact: support@topto.com.au