

# TOPEX

SKU:TXCS4V0240

**TX240**

# OWNER'S MANUAL

---

**4V CORDLESS SCRUBBER**



Thank you for buying this **4V CORDLESS SCRUBBER!**  
Please read this manual carefully before using the product.

DESCRIPTION OF SYMBOLS

v	Volts	Hz	Hertz
~	Alternating current	mm	millimeters
/min	Revolutions per minute	n <sub>0</sub>	No load speed
	Regulatory Compliance Mark (RCM)	∅	Diameter
	Warning	Ah	Ampere hours
	Read Instruction Manual		



GENERAL POWER TOOL SAFETY WARNINGS

WARNING

**Read all safety warnings and all instructions.**  
Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

**Save all warnings and instructions for future reference**

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

**1. WORK AREA SAFETY**

- a. Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

**2. ELECTRICAL SAFETY**

- a. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use, reduces the risk of electric shock.
- f. If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

### 3. PERSONAL SAFETY

**a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

**b. Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

**c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

**d. Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

**e. Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

**f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.

**g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

### 4. POWER TOOL USE AND CARE

**a. Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.

**b. Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

**c. Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.

**d. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

**e. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.

**f. Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges

**G. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

### 5. Battery tool use and care

**a. Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

**b. Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

**c. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.

**d. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

### 6. Service

**a. Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

## 4V CORDLESS SCRUBBER



- 1. Brush Head
- 2. On/off Switch
- 3. USB Type C Port

## SPECIFICATIONS

Voltage	4 V
Battery Capacity	1200 mAh
No Load Speed	10,000/12,000 rpm
Water resistant	IPX6

## SETUP & PREPARATION

The safe use of this product requires an understanding of the information on the tool and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarise yourself with all operating features and safety rules.

### USB CHARGING

This product features USB Charging functionality. Utilise any powered USB port or USB power adaptor (not included) for effortless charging.

### ASSEMBLY



#### WARNING!

Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled or with damaged or missing parts could result in serious personal injury.



#### WARNING!

Do not attempt to modify this product or create accessories or attachments not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

Please contact our email address [support@topto.com.au](mailto:support@topto.com.au)

### OPERATION



#### WARNING!

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.



#### WARNING!

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.



#### WARNING!

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal



## APPLICATIONS

You may use this product for the purposes listed below:

- The power scrubber can be used to clean exterior and interior surfaces.
- This product is not for commercial use.

## TO CHARGE

- Turn the power scrubber off.
- Remove the USB cover and insert the USB cable into the product as shown.
- Connect the USB cable to any powered USB port, or connect it to a USB power adaptor (not included) and plug the adaptor into a power supply.

**NOTE:** Make sure the power supply is normal household voltage, 120 volts, AC only, 60 Hz.

- The LED light will turn on while charging and turn off once the power scrubber is fully charged or when the USB cable is disconnected.






**NOTE:** If the LED does not turn on, the on/off button may still be in the on position. Fully depress the on/ off button to stop the tool and begin charging.

- Upon full battery depletion, an estimate of 5 hours of charging time is required to fully recharge the scrubber.
- Do not place charger in an area of extreme heat or cold. It will work best at normal room temperature.
- Remove the product from the USB power adaptor (not included) or powered USB port once it is fully charged and ready for use.
- Disconnect the USB cable from the scrubber and reinstall the USB cover.

## SELECTING A BRUSH ACCESSORY

Selecting the correct type of brush accessory is important in order to obtain the best performance from the power scrubber. Select the brush accessory based on the application and on the surface you wish to clean. Selecting the right brush accessory will help you clean more efficiently and protect the surface being cleaned. To reduce the risk of property damage, always test the brush in an inconspicuous area of a surface before beginning a project.

**NOTE:** A brush accessory with medium bristles is included with your power scrubber. Brush accessories with hard and soft bristles can be purchased where you bought this product.

BRUSH ACCESSORY	
	Large flat brush
	Flat brush
	Corner brush
	Soft brush
	Velcro head

## INSTALLING/REMOVING BRUSH ACCESSORIES

Insert the accessory into the collet and push it in as far as possible. To remove an accessory, pull it straight out of the collet.

## STARTING/STOPPING THE POWER SCRUBBER

### To start the motor:

- Fully depress the on/off button to start the motor.

**NOTE:** When the motor is on, the brush accessory will spin continuously.

### To stop the motor:

- Fully depress the on/off button to stop the motor.

**NOTE:** When the motor is off, the brush accessory will stop spinning.

## OPERATING THE POWER SCRUBBER

- Select the appropriate brush accessory.
- Hold the scrubber firmly against the surface.
- Fully depress the on/off button to start the power scrubber.
- Move the unit forward and back over the surface to be cleaned.

**NOTE:** Move slowly when learning to use the unit and when scrubbing tough or difficult stains.

**NOTE:** Do not press down on the unit or keep the unit in one place over an extended period of time. Doing so could damage the surface being cleaned.

- When scrubbing is complete, fully depress the on/off button to turn the motor off, and wait for the brush accessory to stop spinning.
- Remove the brush accessory as described earlier and clean thoroughly.

### NOTICE:

Dirt and debris can damage delicate surfaces. Thoroughly rinse the brush accessory before use and continue to do so at regular intervals during use. Thoroughly clean the brush accessory after use. Allow to dry and always store brush accessory without bending the bristles.

## MAINTENANCE

**WARNING! Before cleaning or carrying out any maintenance procedure, ensure that the batteries have been removed.**

### Cleaning

- Keep the ventilation slots of the tool clean at all times to ensure efficient operation.
- After each use, blow air through the tool housing to ensure it is free from all dust, dirt, etc. Build up of dust or dirt particles may cause the tool to overheat and shorten the life of the tool.
- If the housing of the tool requires cleaning, do not use solvents. Use of a cloth only is recommended.
- Never allow any liquid to get inside the tool, never immerse any part of the tool into liquid.

### Storage

When not in use, the tool should be stored in a dry, frost free location, keep out of children's reach.

**Note:** TOPEX will not be responsible for any damage or injuries caused by repair of the tool by an unauthorised person or by mishandling.

## CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

## WARRANTY

Your warranty form should be retained by you at all times. In order to make a claim under this warranty, you must return the product with your receipt of purchase. Prior to returning your product for warranty. Please contact us via our after sales support services.

**EMAIL: [support@toptop.com.au](mailto:support@toptop.com.au)**

### 1 YEAR REPLACEMENT WARRANTY

Your product is guaranteed for a period of 12 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective, it will be replaced in accordance with the terms of this warranty. Warranty excludes consumable parts, for example: driver bits.

### WARNING

1. The following actions will result in the warranty being void.  
Professional, Industrial or high frequency use.
2. If the tool has been operated on a supply voltage other than that specified on the tool.
3. If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
4. Failure to perform maintenance as set out within the instruction manual.
5. If the tool is disassembled or tampered with in any way.

### How to get 1 extended year warranty?

This product comes with 1 year replacement warranty. However, you may get 1 extra year warranty with conditions. Please ask for detail by sending an email to [support@toptop.com.au](mailto:support@toptop.com.au)



**TOPEX**<sup>®</sup>

CUSTOMER SERVICE  
& PARTS

Contact: [support@topto.com.au](mailto:support@topto.com.au)